

Installation Instructions

2009–2014 Ford F-150 Supercab *Underseat Storage*

Fits DU-HA Part Numbers 20071

Materials Needed:

// 10mm socket

Installation Instructions:


- Flip up the back seats.
- Remove the jack from underneath the back seat and remove the bracket that holds the jack in place using a 10mm socket.
- 3 Slide driver's side end of DU-HA against seat bracket. Snap other side of DU-HA around passenger's side seat bracket. (You may have to bend side inward to snap into position.)
- Secure the DU-HA to the floor of the truck using one of the existing bolts (one that was originally used to secure the jack bracket) using a 10mm socket.
 Please note: If the existing bolt is not long enough to secure the DU-HA to the floor (due to the rubber floor mats under the seat), use the included bolt and washer instead.
- Secure the passenger's side using the provided strap. Thread the strap through the slot in the back of the DU-HA and around the seat bracket (as pictured).
- Install foam organizer/gun racks with plastic stiffeners by sliding them into slots in the DU-HA (as pictured).
- Place jack and jack handles inside the DU-HA. *Note:* You can also place the jack underneath the truck on top of the spare tire (see bottom right for more information).

Safety Instructions:

Warning: Seat bottom must be latched down at all times while vehicle is moving. Make sure the DU-HA is secured in the vehicle according to installation instructions. Do not store explosives or hazardous materials in the DU-HA. Do not place loaded guns in the DU-HA.

For further instructions refer to truck owners manual or contact DU-HA, Inc.

Part	Description	Qty
Α	DU-HA Storage Unit	1
В	Foam Organizer / Gun Rack	2
С	Plastic Stiffener	2
D	Bolt 20004,05,06,12	1
Е	Washer 20004,05,06,12 - 3/8"	1
F	Nylon Strap with Buckle	1

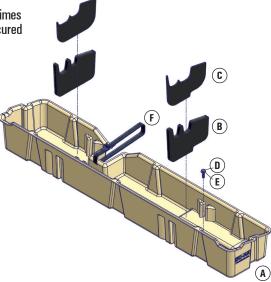











Ribs on buckle should face up. Thread strap through buckle as shown.





Helpful Hint:

The jack can also be stored underneath the truck, on top of the spare tire, to free up space in the DU-HA.

First wrap the jack in a plastic bag or cloth, to keep it from getting dirty. Then, lower the spare tire (per instructions on jack tools) from under the truck and set the jack on top, as pictured. When finished, reel tire back up.