


# DU-HA<sup>®</sup> All-Terrain


**70826** - All-Terrain Mounting Kit - JD Gator  
XUV835 + Kawasaki Mule (5X, 4010, Pro FXT,  
Pro MX) + Tracker and Artic Cat Side x Side

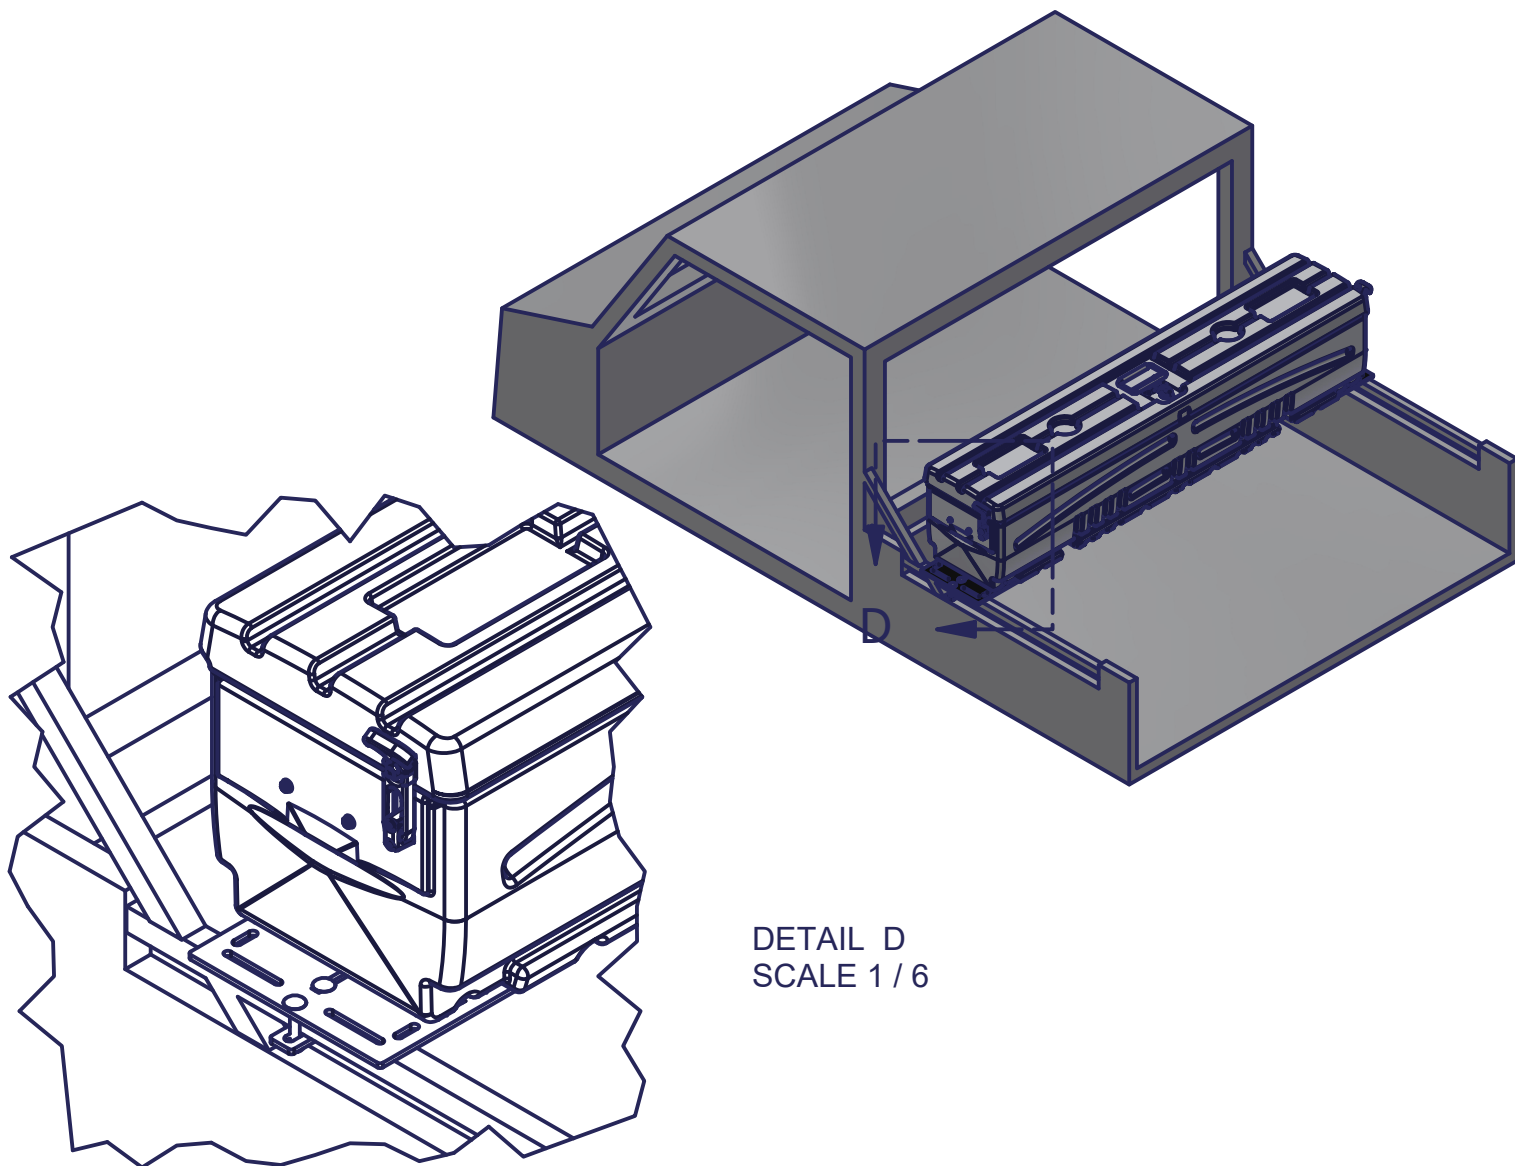

## STEP 1 - Attach Handle to Lid

Place Handle (9) over holes in Lid Top. Insert two Bolts #10 x 1.5" (12) through Handle (9), Flat Washer - #10 (14) and All-Terrain Lid. Secure with Flat Sealing Washer (has a rubber backing) - #10 (15) and Lock Nut #10 (16) Use 1/8" Hex Key Wrench.

Note: Handle may already be installed.

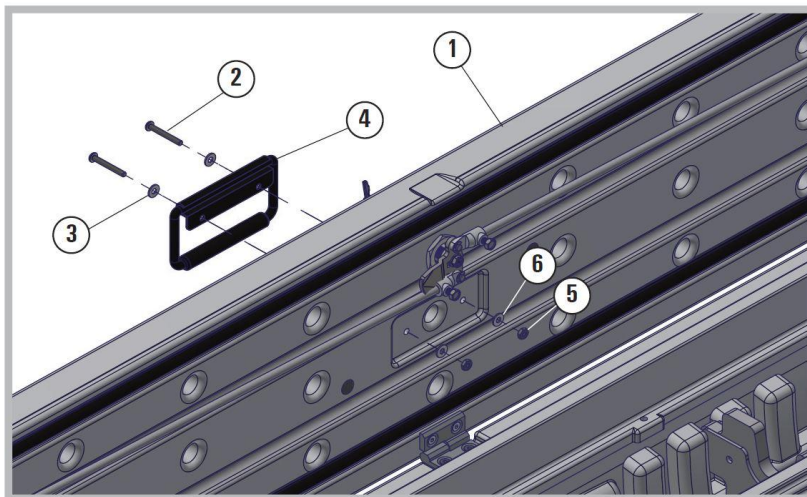

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	70820	All-Terrain Storage Box Lid
2	2	1001006	Screw #10-24 x 1.50 SS
3	2	1001143	Washer - Flat #10 x 1/2 OD SS
4	2	1001044	Handle - 90 Degree Metal- Black
5	2	1001144	Nut Nylock #10-24 SS
6	2	1001244	Washer - Bond Seal #10 SS

## Step 2: Attach Plates to Box

Attach the Universal Mounting Plates (item 2) to the bottom of the All-Terrain Storage Box (item 1) using 1/4 x 1 screws (item 3), 1/4 lock washer (item 6) and 1/4 flat washers (item 4), make sure to use the Spacers (item 5) between the mounting plates (item 2) and the All-Terrain Storage Box (item 1). Next measure the width of your UTV box and adjust your mounting plates (item 2) so the outer center square slot will line up with the outside of the tube on your UTV. Make sure to orientate the mounting plates (item 2) with the larger slots facing outward, as shown in Detail C. On some narrower UTV's you will need to turn the plates around so they face inward in order to be able to attach to the UTV box. On some instances where the plates are mostly under the All-Terrain storage box you will need to insert the carriage bolts in the center slot before you attach the plates to the All-Terrain storage box.

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	70820	DU-HA All-Terrain Storage Box
2	2	1001271	All-Terrain Universal Mounting Plate
3	8	1001195	Bolt Hex .25 x 1.00
4	8	1001012	Washer Flat 1/4
5	8	1001182	Spacer 1" OD x 3/8"
6	8	1001010	Washer Lock 1/4"

## Step 3: Set Box on UTV




Set the All-Terrain Box (item 1) onto the UTV Box in your desired position. Make sure you have enough room to open the lid without hitting the cab.

## Step 4: Secure Box to UTV

Secure the All-Terrain Box (item 1) to the UTV Box (item 2) by inserting 5/16 x 1-3/4" carriage bolts (item 5) into the center slot on the Universal Mounting Plates (item 2), one 5/16 x 1-3/4" carriage bolt (item 5) on each side of the tube on the UTV box (item 2). Slide the universal backer plate (item 4) over the 5/16 x 1-3/4" carriage bolts (item 5) on the bottom side of the tube on the UTV and secure with 5/16" washers (item 7) and 5/16" Nylock nuts (item 6).

**Note:** On Tracker and Artic Cat it works best to flip the carriage bolt (5) so the head is on the bottom.

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	70820	DU-HA All-Terrain Storage Box
2	1	--	Kawasaki Mule Pro FXT BOX (shown)
3	2	1001271	All-Terrain Universal Mounting Plate
4	2	1001272	All-Terrain Universal Backer Plate
5	4	1001278	Carriage Bolt 5/16"-18 x 1-3/4"
6	4	1001014	Nut Nylock 5/16-18
7	4	1001012	Washer Flat 5/16

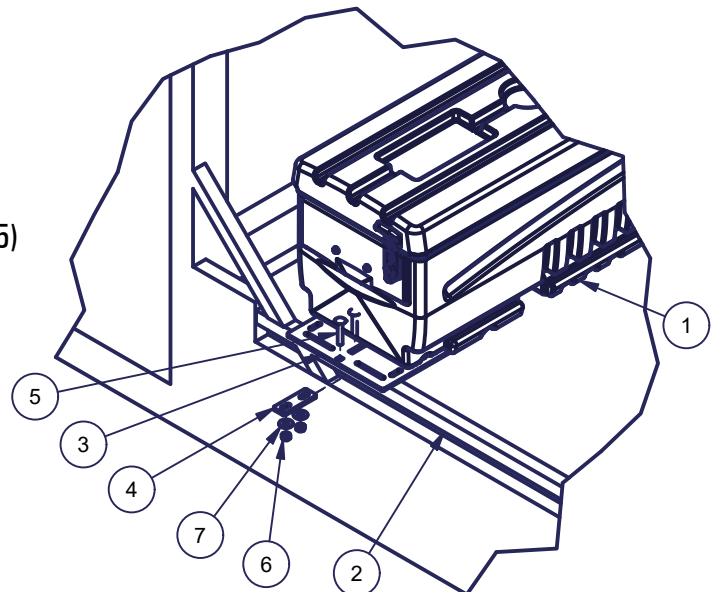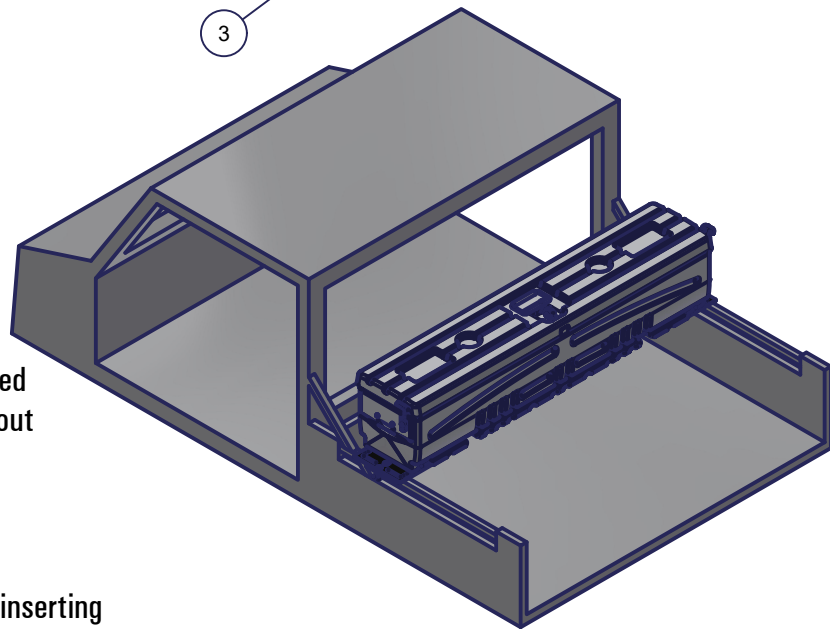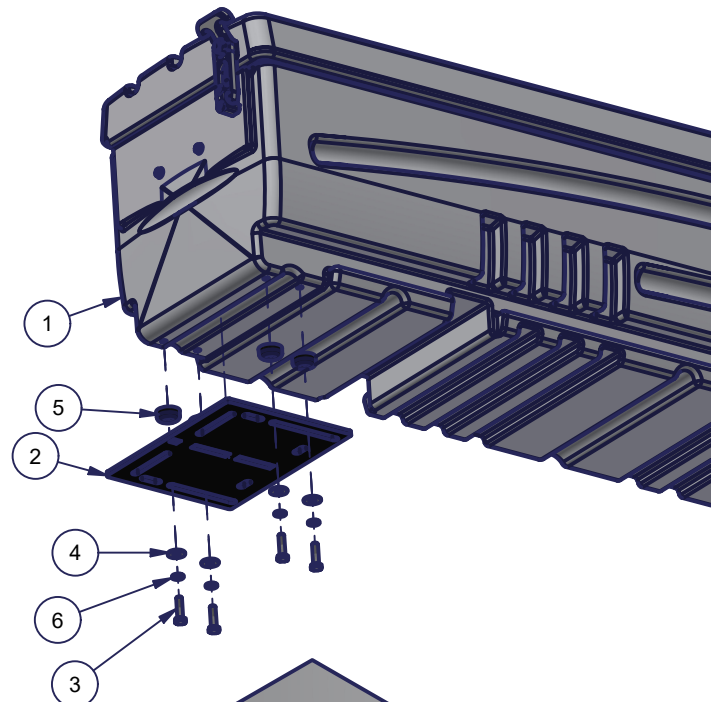



# DU-HA® All-Terrain

## Step 5: Attach Rubber T-Handles

Place Rubber T-Handle (7) over inserts in Base (2). Insert two Screws #10-32 x 1.0" (8) through T-Handle (7) and use 1/8" Hex Key Wrench to tighten into the inserts, on each end, T-Handle should point outward when in the up position. Next install the Rubber T-Handle Keeper (6) on the lid, make sure the alignment knob on the back of the T-Handle Keeper lines up with the recess in the lid (1) and secure in place with one Screw #10-32 x 1.0" (8) by inserting through the T-Handle Keeper (6) and thread into the insert in the lid, on each end.

## Step 6: Foam Organizer / Gun Holders




Place each Foam Organizer / Gun Holder assembly (3) into the channel slots in the side walls of the ALL-TERRAIN Box (2). They can be positioned in 3 locations on each end or in the center of the ALL-TERRAIN Box. To install rotate horizontally above slot and rotate downward and slide into slot. Stock of gun should rest in large groove; barrel should rest in small groove.

## Step 7: Center Brace

To maximize strength and stability, use the Center Brace (5). Insert each end into the holes on the top lip of the ALL-TERRAIN Box (2) at the middle. To access cargo, lift front side of Center Brace out of the hole and rotate the Center Brace out of the way to the right and insert into storage hole on back side of ALL-TERRAIN Box (2). Return Center Brace to front hole when finished.

## Step 8: Closing and Locking the ALL-TERRAIN BOX

To close the Humpstor shut the lid and secure end T-Handles (7) by grabbing the top of the rubber handle and pull up and secure onto the Rubber T-Handle keeper (6) on each end. Next on top of the lid (1) turn the Wing Knob 1/4 Turn Latch (4) counter clockwise to engage locking mechanism. To lock Humpstor, use the provided key. Insert key with teeth facing away from you into Wing Knob 1/4 Turn Latch (4) and turn counter clockwise to lock and clockwise to un-lock.

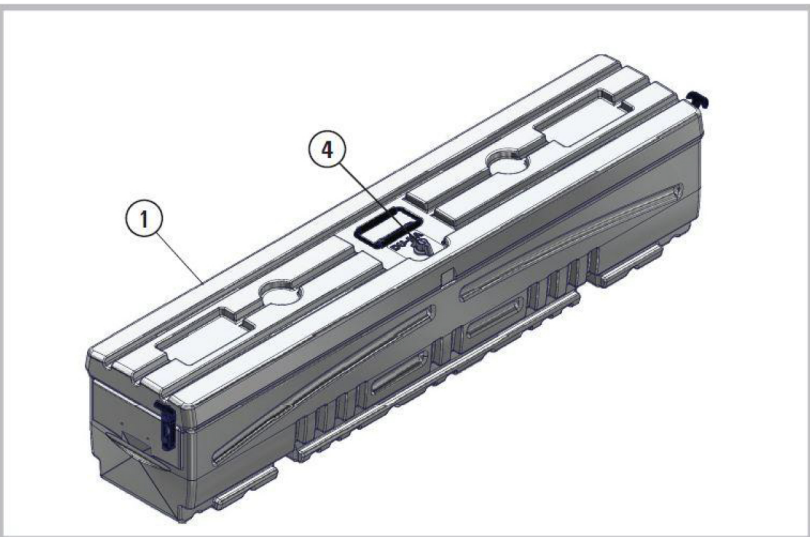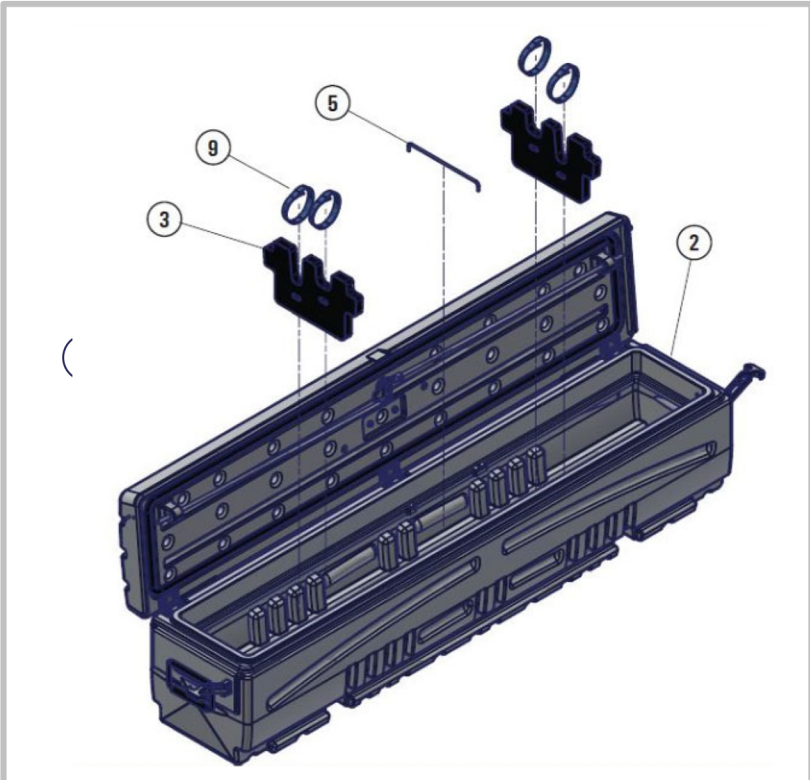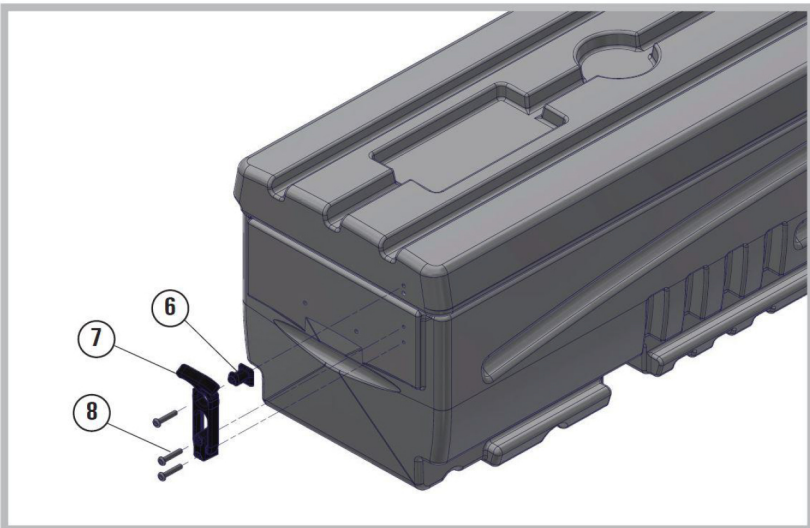

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	70820	All-Terrain Storage Box Lid
2	1	70820	All-Terrain Main Body
3	1	Divider 70800 Assm	Divider Pkg Assm - Humpstor 2022
4	1	1001232	Wing Knob 1/4 Turn Latch
5	1	1001239	Center Wire Brace
6	2	1001235	Latch - Rubber T-Handle - Keeper
7	2	1001235	Latch - Rubber T-Handle
8	6	1001260	Screw BHSCS #10-32 x 1" SS

**Safety Instructions:**

**Warning: 75 LBS CAPACITY – DO NOT EXCEED 75 POUNDS OF CARGO IN THE ALL-TERRAIN BOX.** CAUTION – Do not store explosives or hazardous materials in the ALL-TERRAIN BOX.

Do not place loaded guns in the ALL-TERRAIN BOX.

For further instructions refer to the vehicle owners manual or contact DU-HA, Inc.